


INSTRUCTIONS LUMINAIRES

SUSPENSION AVEC CACHE-DOMINO

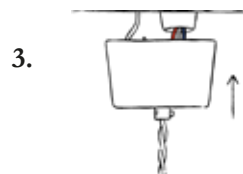

1. Enfiler et faire descendre le cache-domino sur le fil.
2. Enfiler le fil dans la languette en plastique. Insérer les fils électriques dans le domino. Accrocher la languette au crochet.
3. Remonter le cache-domino contre le plafond.
4. Visser la vis du serre-câble pour bloquer le cache-domino, et s'il y a, les vis latérales en serrant doucement à la main pour ne pas casser la porcelaine.



ABAT-JOUR MURAL




1. Positionner l'applique contre la sortie électrique et marquer l'emplacement des vis.
2. Visser les vis dans les chevilles en les laissant dépasser.
3. Insérer l'applique sur les vis, dévisser légèrement si nécessaire pour que l'applique épouse au mieux le mur.



BALADEUSE AVEC PATÈRE

1. Positionner la patère contre le mur et visser les vis dans des chevilles en serrant doucement à la main pour ne pas casser la porcelaine.
2. Enrouler le fil autour de la patère en faisant un noeud et réaliser plusieurs tours.


SUSPENSION AVEC PATÈRE POUR APPLIQUE

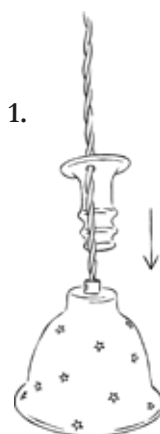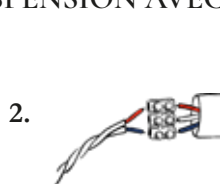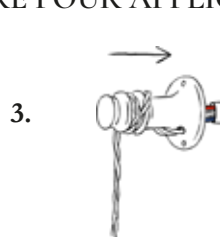

1. Enfiler et faire descendre la patère sur le fil.
2. Insérer les fils électriques dans la patère.
3. Remonter la patère contre le mur et visser les vis dans des chevilles en serrant doucement à la main pour ne pas casser la porcelaine.
4. Enrouler le fil autour de la patère en faisant plusieurs tours.


LIGHTING INSTRUCTIONS

PENDANT LIGHT WITH CEILING COVER—

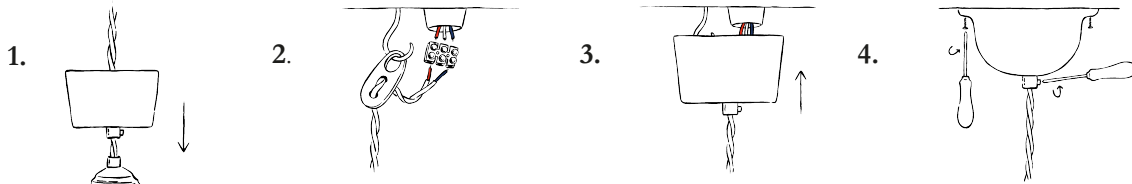


1. Slide the ceiling cover down along the cable.
2. Thread the cable through the plastic tab. Insert the electrical wires into the connector block, then hang the tab on the hook.
3. Push the ceiling cover back up against the ceiling.
4. Tighten the cable clamp screw to secure the cover, and if there are side screws, tighten them gently by hand to avoid breaking the porcelain.

WALL LAMPSHADE

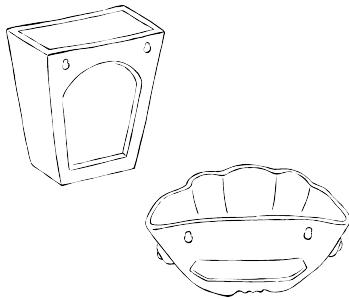

1. Position the wall light against the electrical outlet and mark the screw locations.
2. Screw into the wall plugs, leaving the screws slightly protruding.
3. Place the wall light onto the screws, loosening them slightly if needed so it sits flush against the wall.

PORTABLE LAMP WITH WALL HOOK

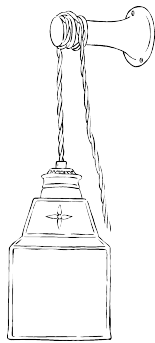

1. Position the hook against the wall and screw it into the wall plugs, tightening gently by hand to avoid breaking the porcelain.
2. Wrap the cord around the hook, tying a knot and looping it several times.

PENDANT LIGHT WITH WALL HOOK

